



LOADER INSTALLATION

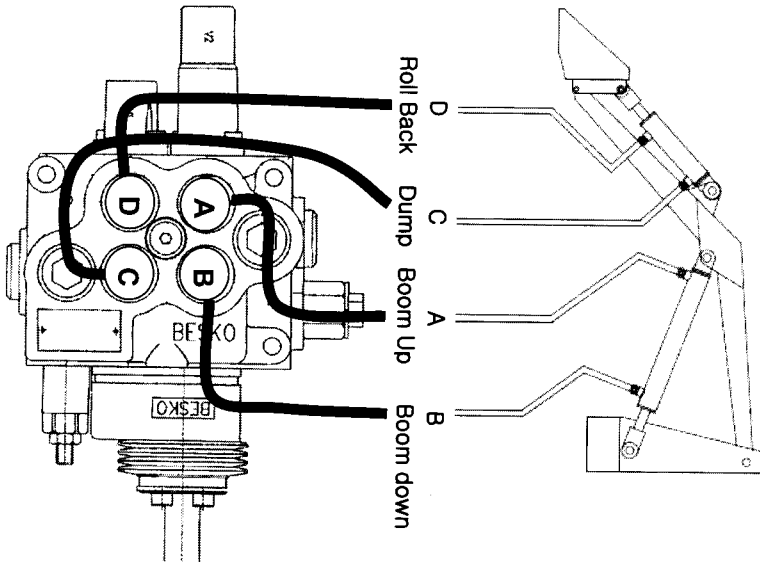

STEP 7.

Install Hydraulic Line

- (1) Union PF3/8 : 2EA
- (2) Elbow PF3/8-PT3/8 : 4EA
- (3) Union PF3/8-72 : 2EA
- (4) Quick Coupler PT3/8 : 4EA

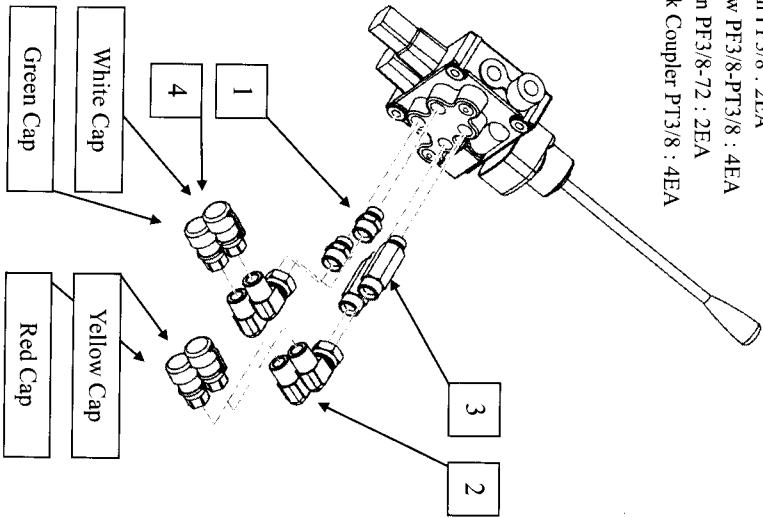

DATE	JOB CARD NO.	NATURE OF DEFECT	PART

FRONT END LO